


Preparing New Autani Manager for System Restoration

1. Establish an Internet Connection

Confirm the Autani Manager is online by checking the green LED ring, which should display a green breathing pattern. The below LED illustrations describe the green LED ring's signals:

- **Power-Up Phase:** The LED ring will start spinning green clockwise when power is applied.

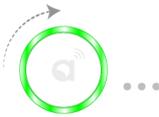

- **Green Breathing Pattern:** Limited to the first two minutes after successful startup.




If the Autani Manager is not online via the green LED ring, refer to the *Prerequisites Sheet*.

- If static settings are needed for the Autani Manager, configure the USB stick to apply static network settings. Please refer to the *USB Stick Instructions Sheet*.
- For non-static settings, follow the first-time setup routine. Refer to the *Manager User Manual*.

2. Notify Support

- Send an email to support@autani.com with the following information:

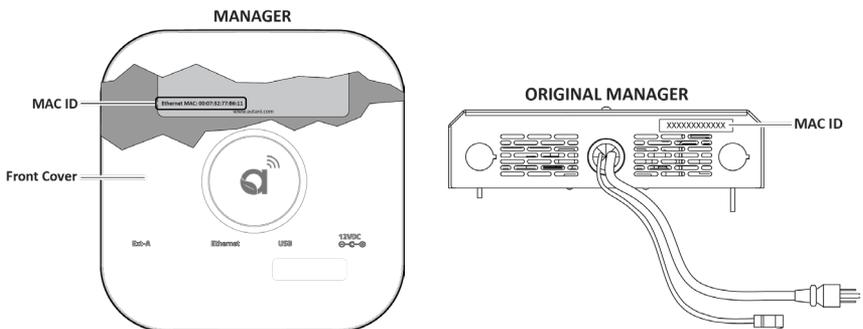

- The Ethernet MAC address of the new Manager.
- The MAC address of the original Manager.
- A request for database restoration services.

3. Once services have been completed, you will receive a confirmation email from Support.