


1

ACCESSING THE USB PORTS

Remove the top cover of the CORE/Manager to access the USB Ports.

NOTE: The height available for the USB stick insertion is around <2.5". A small form factor USB stick is recommended, otherwise an extension cable should be used for the regular USB stick.

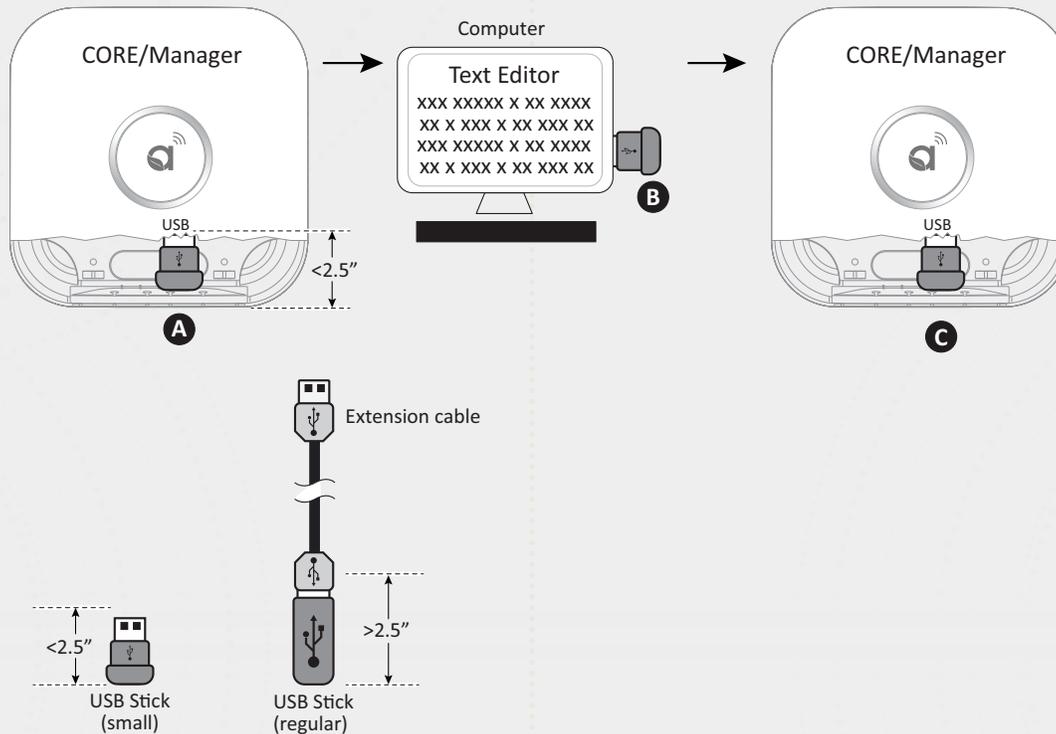


1. Locate a small form factor USB stick that is formatted as FAT32 (typically the default).
2. If the USB drive has ever been used for this purpose previously, open it from a PC and ensure you delete the "autani-networking-cfg.txt" file before moving forward.
3. With the CORE/Manager powered and plugged into your local area network, insert the USB drive into one of the USB ports available inside the CORE/Manager.
4. Leave the USB stick inserted for 2 minutes.
5. Remove the USB stick and insert it into your PC.
6. Open the USB folder and locate the text file "autani-networking-cfg.txt" in the main directory.
7. Note that the last line of text in the file will provide the CORE/Manager's current IP address under DHCP.
8. Using a text editor, the user can follow the instructions in the file to change the networking configuration between DHCP (default) and static. If switching to a static configuration, you must enter the IP address, subnet mask, default gateway, and primary DNS server.
9. Save the text file after making your edits, and insert the drive back into the CORE/Manager while it is powered ON.
10. Wait two minutes with the USB stick inserted for the settings to apply.
11. Remove the USB stick, then perform a restart, after restarting, the Manager/CORE will now use the statically assigned IP settings. To change these settings back to DHCP repeat the steps above.
Note that the Autani Manger/CORE will not overwrite your text file. Make sure you delete the original file before reconfiguring the network OR verifying the current settings.
To perform a controlled reboot, follow the instructions on next page.

Continued....

QUICK INSTALLATION SHEET

REBOOTING THE CORE/MANAGER

- A. Remove the front cover on the CORE/Manager.
- B. Reset the CORE/Manager

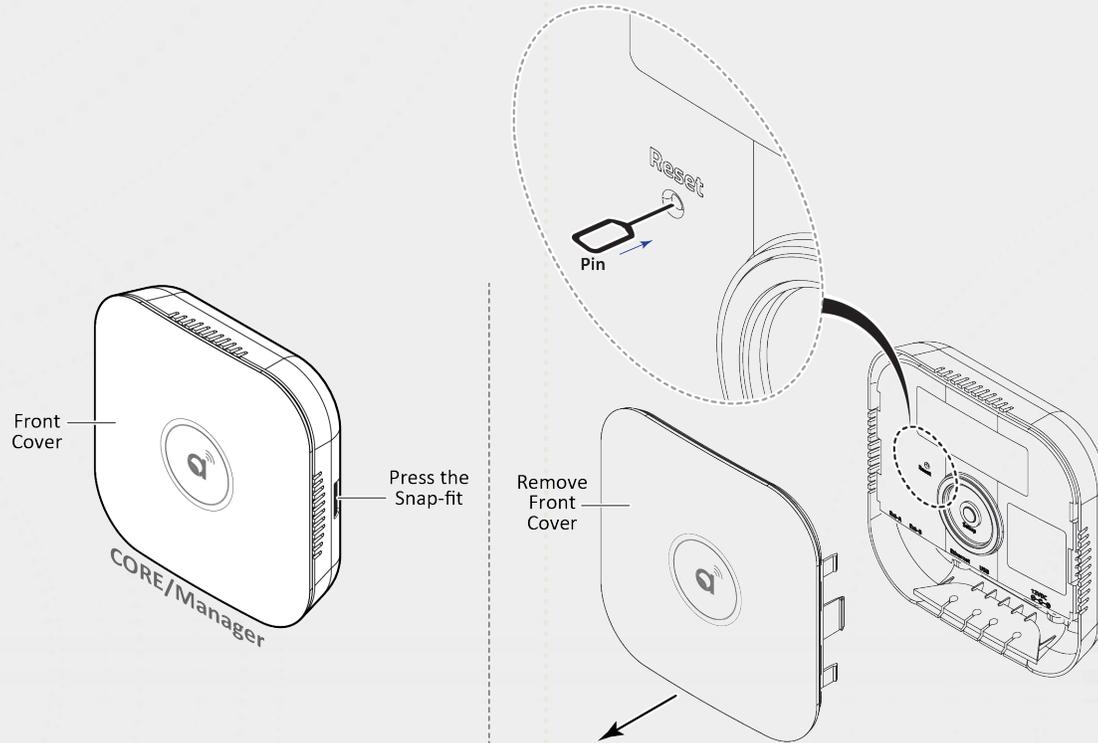

- C. Using a paper clip, press and release the Reset button once. Wait 60 seconds. The CORE/Manager is OFF when the LED ring on the front of the CORE/Manager is no longer lit.
- D. Using a paper clip, press and release the Reset button once to restart the CORE/Manager.