

1

On the provided list of device serial numbers, add the location for the Autani Wireless Module Outdoor Temperature Sensor.



EXAMPLE

2

Follow the steps below for connecting the Autani Wireless Module to the Outdoor Temperature Sensor.

NOTE: Autani recommends the use of 18 to 20 AWG wire for all sensor installations.

Secure the Outdoor Temperature Sensor to an outside wall and route a dedicated conduit to an interior wall.

Outdoor Mounting Configuration

The Outdoor Temperature Sensor should be mounted under an eave, shield, or in an area out of the elements or direct sunlight. The aluminum tube must point down when mounting the Outdoor Temperature Sensor. Place the unit where it is to be mounted with the cover facing out. Attach the unit using the supplied #8 x 3/4" self-tapping screws. Refer to illustration in back page.

After mounting and wiring the Outdoor Temperature Sensor as shown in the back page, place the cover back on and gently turn until it is secure.

3

Secure a workbox to the interior wall within 10 ft. of the Outdoor Temperature Sensor to mount the Power Pack and Autani Wireless Module using double-sided tape. The Autani Autani Wireless Module and the Power Pack must be installed indoors since they are rated for indoor use only. For optimum wireless range performance, mount the Autani Wireless Module to the top or side of the workbox towards the front and away from the wall or any nearby metal duct, pipe, etc.

CONTINUED.....

4

Connect the Black wire from the Power Pack and the Black wire from the Autani Wireless Module to the Green wire on the Outdoor Temperature Sensor and secure with a wire-nut connector.

Wiring Table: Autani Wireless Module to Outdoor Temperature Sensor

Autani Wireless Module	Outdoor Temperature Sensor	Power Source
Red	-	Red (24V)
Black	Green	Black (Common)
Orange	White	-
White		-


5

Connect the Orange and White wires from the Autani Wireless Module to the White wire on the Outdoor Temperature Sensor and secure with a wire-nut connector. See Wiring Table on leftside.



6

Connect the Red wire from the Power Pack to the Red wire on the Autani Wireless Module and secure with a wire-nut connector. See Wiring Table on leftside.

MOUNTING

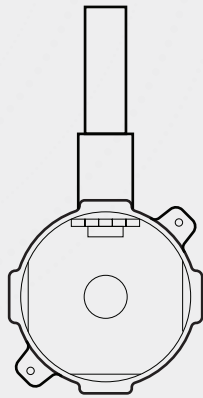

Incorrect

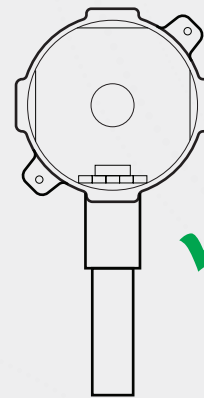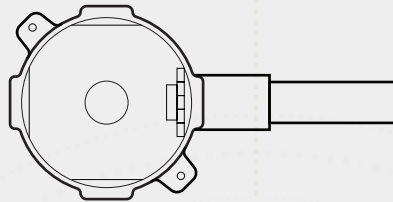

Correct

