

1

On the provided list of device serial numbers, add the location for the Autani Wireless Module Relative Humidity Room Sensor.

SN:AUXXXXXXXXXX

**EXAMPLE**

2

Determine installation location for the Room Sensor while maintaining at least 1-foot of space from any metal or concrete for optimum wireless performance.

3

Install a plastic wall switch workbox if necessary.

4

Route the 24V AC/DC power source wires to the wall switch workbox.

5

Connect the Red and Black wires to the 24V AC/DC power source.

6

Secure the Room Sensor to the wall switch workbox using the provided screws.

7


Turn power ON and confirm LED is flashing on the Autani Wireless Module.

8

Using a 1/16" Allen Wrench/Hex Key, turn both set screws located at bottom of housing counter-clockwise to secure the cover.

**QUICK INSTALLATION SHEET**

**REFERENCE INFORMATION**

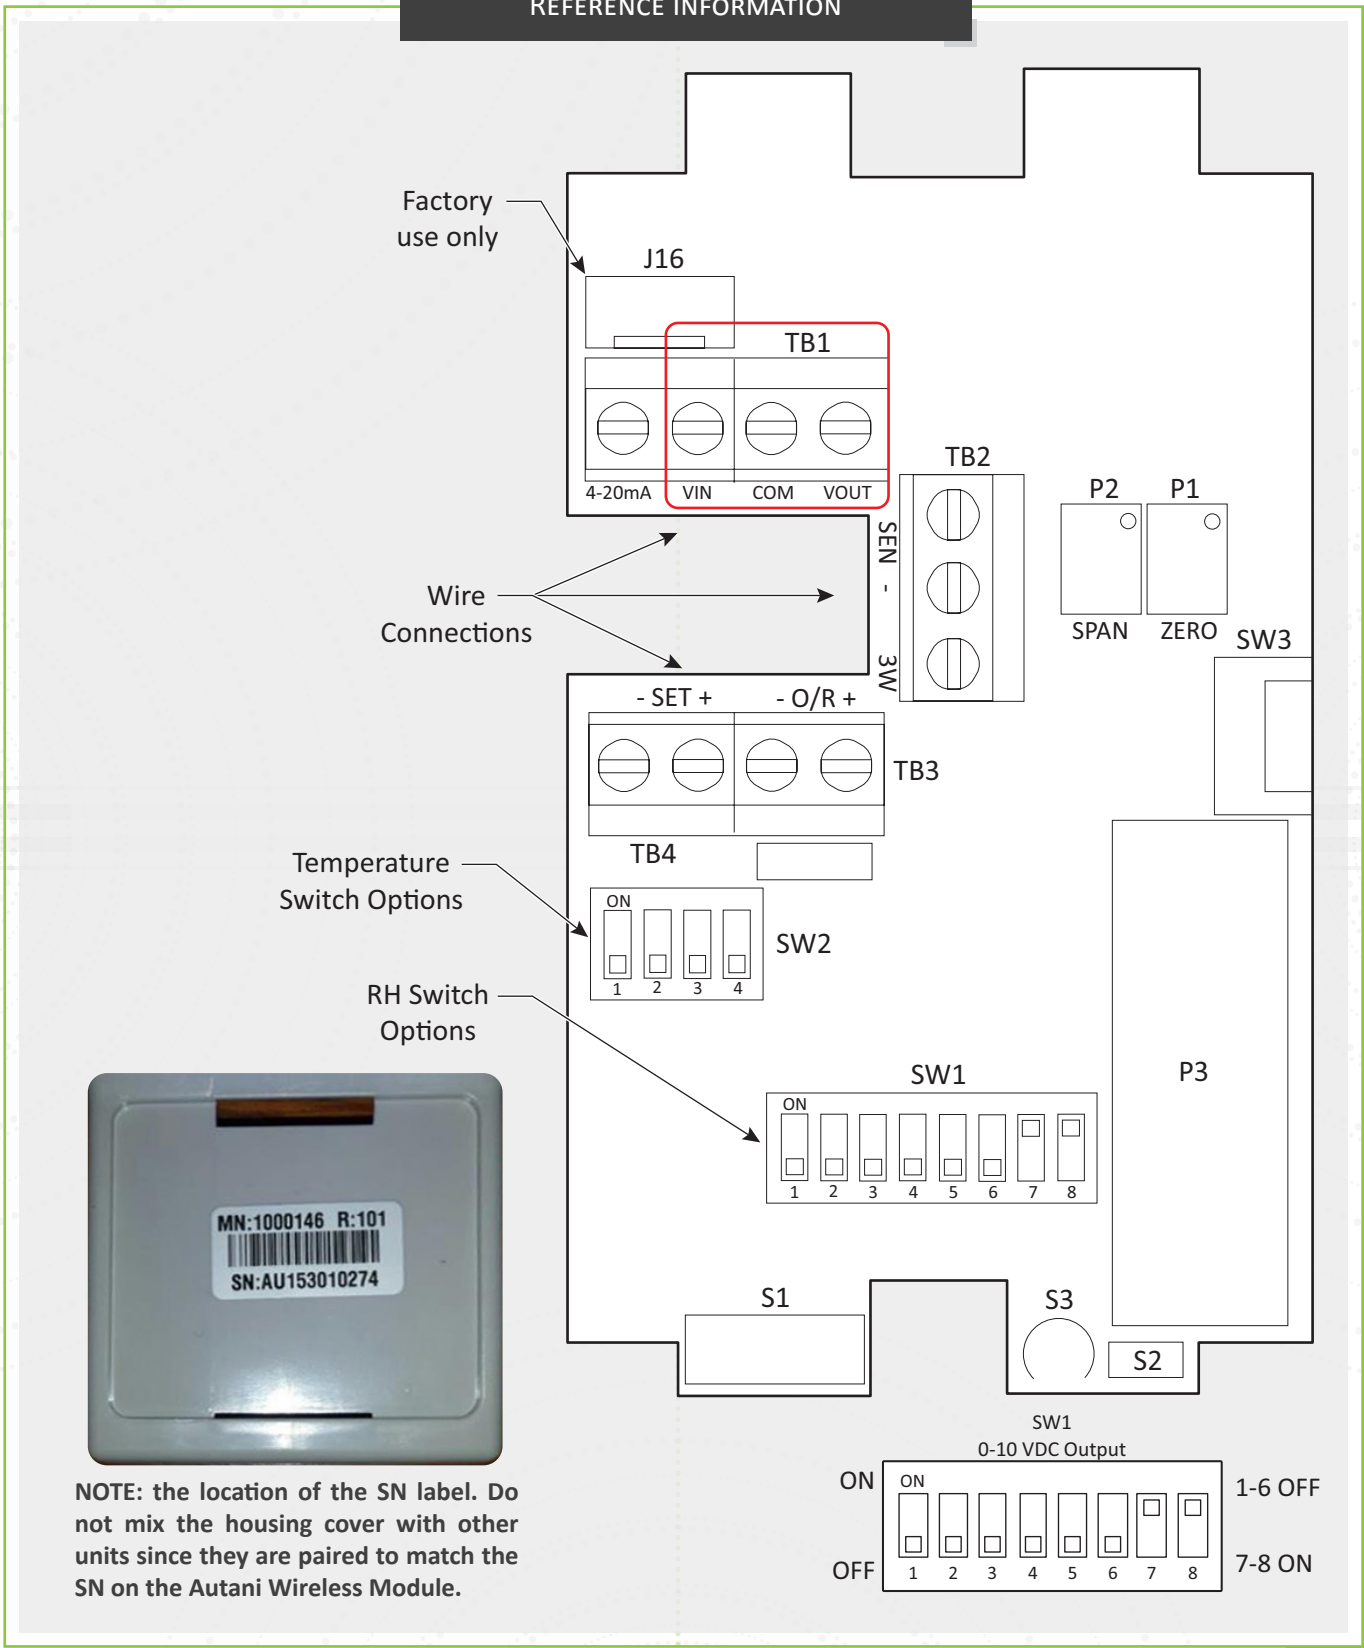

**NOTE:** the location of the SN label. Do not mix the housing cover with other units since they are paired to match the SN on the Autani Wireless Module.