



1

Model #
1000152-30 / 1000152-31 (Conformal Coated)

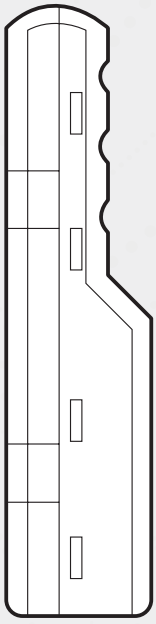

2




Turn OFF power to the RS-485 device to which the remote node is to be connected.

3

Wire each remote node to the intended device based on the device duplex mode. LED1 on the Autani Wireless BACnet Gateway module may initially blink Amber (Red & Green). After a few seconds, LED1 should blink Green indicating the BACnet Gateway module is in configuration mode.

1

On the provided list of device serial numbers, add the location for the Autani Wireless BACnet Gateway.

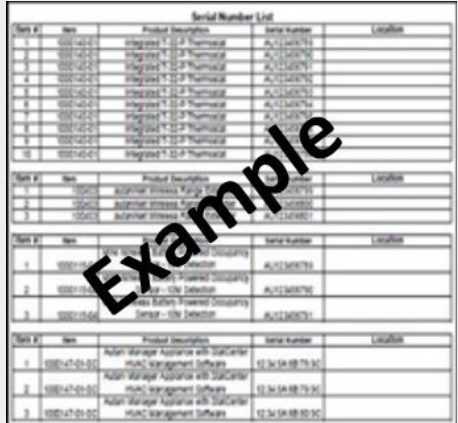

Example

Wiring Table I:
Half Duplex Wireless BACnet Gateway

Gateway	Wire Color	RS-485 Device
Tx+	Green	D+
Rx+	Blue	
Tx-	Yellow	D-
Rx-	White	
12-24V	Red	12-24V
GND	Black	GND