


Model #
1000152-09-26

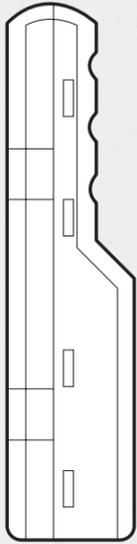


There are no user-serviceable parts inside the Device. Unauthorized dismantling will void the warranty. For warranty information, see www.autani.com/legal.

1

On the provided list of device serial numbers, add the location for the Range Extender.



EXAMPLE

2

Connect the Range Extender to 12-24V AC or DC.

Color	Description
Red	12-24V
Black	Common

NOTE: Range is 1000 feet "line-of-sight" distance for transmission/reception. Range is reduced when the signal travels through walls, floors, ceilings, or other objects. Avoid placing the Range Extender:

- Near electrical equipment such as computer servers or electrical breaker panels
- Where the signal travels through concrete walls or floor


3

Join the Range Extender to the autaniNet network.

- If the Range Extender is being installed with an Autani CORE/Manager and other devices, see the complete documentation package for the Autani Manger.
- If an Autani CORE/Manager and other devices were installed before:
 1. Click **Settings** on the left navigation bar of the Autani software.
 2. Click the **Device Setup** tab.
 3. Click the **Add Device(s)** button.
 4. Select the row of the Range Extender being installed.
 5. Click **Next**.
 6. Review the Range Extender information.
 7. Click **Next**.
 8. Click **Finish**.

4

LED1 color changes indicate the stages of the device joining the network.

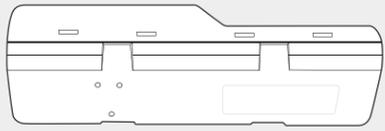

LED Color		
		
Red	Amber	Green
Device Status Description		
When device is powered, it automatically searches for network.	Device has found an Autaninet network and is waiting for permission to join.	Device has been added to the network and is Actively communicating.

SERIAL NUMBER INFORMATION AND TRACKING

The serial number or ID of a device is used to track device installation locations and details for the commissioning process. The identification information for each device should be tracked in a meaningful way, many devices include duplicate 'stickers' with this information. Autani provides an iOS app to assist with the process.



For help getting starting with the iOS Commissioning App please see Autani's User Guide for the iOS Commissioning App.



Once commissioning details are collected, either through the iOS Commissioning App, or by tracking identifiers on drawings/spreadsheets. Please provide this information to support@autani.com to begin the commissioning process.